

M 3000

Suitable for following models:

MRR 504	P1 / P2 PP1 / PP2
MRNO 505	PN 20 M PN 2001 / 2 / 3 / 4 PNE-01-NB
MRMI 505C	TR 25 P TR 20 M / SM / TM / VM TR 20 50 M PN 2002 M / PM PNE-02 /03 /04-NB PN 2005 / 6 / 7 / 8 PN 2015 / 16 PN 2017 / 18 PNB 2005 / 6 / 7 / 8 PNB 2015 / 16 PNB 2017 / 18 TR 30 V – TR 3015V TS-30 - TP-30 PNR 30 PTR 30 C / L
MREV 506	TRE-03-NB TR 25 / B TR 25 15 TR 25 L TR 25 15 L TR 25 50 TR 25 L 25 TR 30 / B / T / V TR 30 B TR 30 10 / 15 TR 30 58 / R / V TR 58 / R DP 15/18/20/23/24/25 N
MRSFSFF 507	SF 30 SFF 30
MRCSCSF 507/12	CSO 30 CCS-10/11/12/13/15/18NB
MRTRR 506/P	TRR 58 TRR 58 G / TRR 58 B

M 5000

Suitable for following models:

MRCSP 519	CSP 30.1 / 2 / 3 / 7 CSP 30.5 / 8 / 9 CSP 30.G CSP 30.GL CSP 30.GR
MR5 520	TR 5000 / B / P / R / PG / PR TR 5000 V / W TR 5000/10 /13 /15 TR 5045 V TRR 5000 TTR-5000/TTR-5500 TP-5000-15 PN 5001 / 2 / 3 / 4 PN 5005 / 6 / 7 / 8 PN 5008 PN 5025 / 1 / 2 / 3 PN 5025 Z PN 5028 PN 5025 C PN 5030 PPN-04/05/06-NB Tutti i preformatori PN/5050/5 Tutti gli estrattori, eccetto PLCC
MR9 520/9	CS 30 CS 30 L / X / XZ CSF 30 / S