

SA 2650 Kit User Manual



Table of Contents

1. System Installation Planning	1
2. Device Introduction	3
3. Getting Started	6
4. System Default Setting	10
5. Connect2Home Application	11
6. System Information and Operation	32
7. Troubleshooting	36
8. Specifications	38

Information and illustrations are subject to change within this document. Blaupunkt reserves the right to alter the specification and product design at anytime without notice.

1. System Installation Planning

Away arm and Home Mode Planning

The alarm system supports two arming modes: Away arm and Home. Away arm mode will arm all accessory devices installed in the system to raise alarm when activated. Home Arm mode will partial arm the system so that no intruder could get inside the premises without triggering an alarm, yet the user can move within the house freely. Plan your device location in advance by determining which area should remain unarmed in Home Arm mode, and decide which sensor should still be operating in Home Arm mode.

For more information, please see **5. Connect2Home Application**.

Device Operating Range

All devices in the alarm system has an approximate range of 30 meters in typical domestic environment. The range may vary depending on different home condition. When installing devices, make sure the device range is tested before mounting the device.

Tamper Protection

Your Control Panel and accessory devices are protected from sabotage attempt by a "tamper switch," which is triggered when the device is removed from mounted surface, or its cover opened. When the tamper switch is triggered, the alarm system will be activated to inform you. To make sure the tamper switch functions properly, please make sure the switch is fully depressed against the mounting surface when installing your accessory devices.

System Extension


Aside from the devices included in the package, you can further improve the capability of your alarm system by purchasing extra accessories. Including extra PIR Sensor or Door Contact to extend your protection area; Remote Keypad for a secondary system operation platform; Smoke Detector for fire protection; Temperature Sensor for High/Low Temperature report; and Power Switch for energy management and Home Automation.

For more information, please see **5. Connect2Home Application**.

General Device Location Guideline:

- Avoid mounting the Control Panel and devices close to large metal objects or electrical interference source, such as fridges and microwave ovens, as they could affect signal strength.
- For devices that has tamper protection function, mount on even surface to ensure the tamper is fully closed when mounted. For uneven surface, use extra packing material on the back.

Device Location Panning:

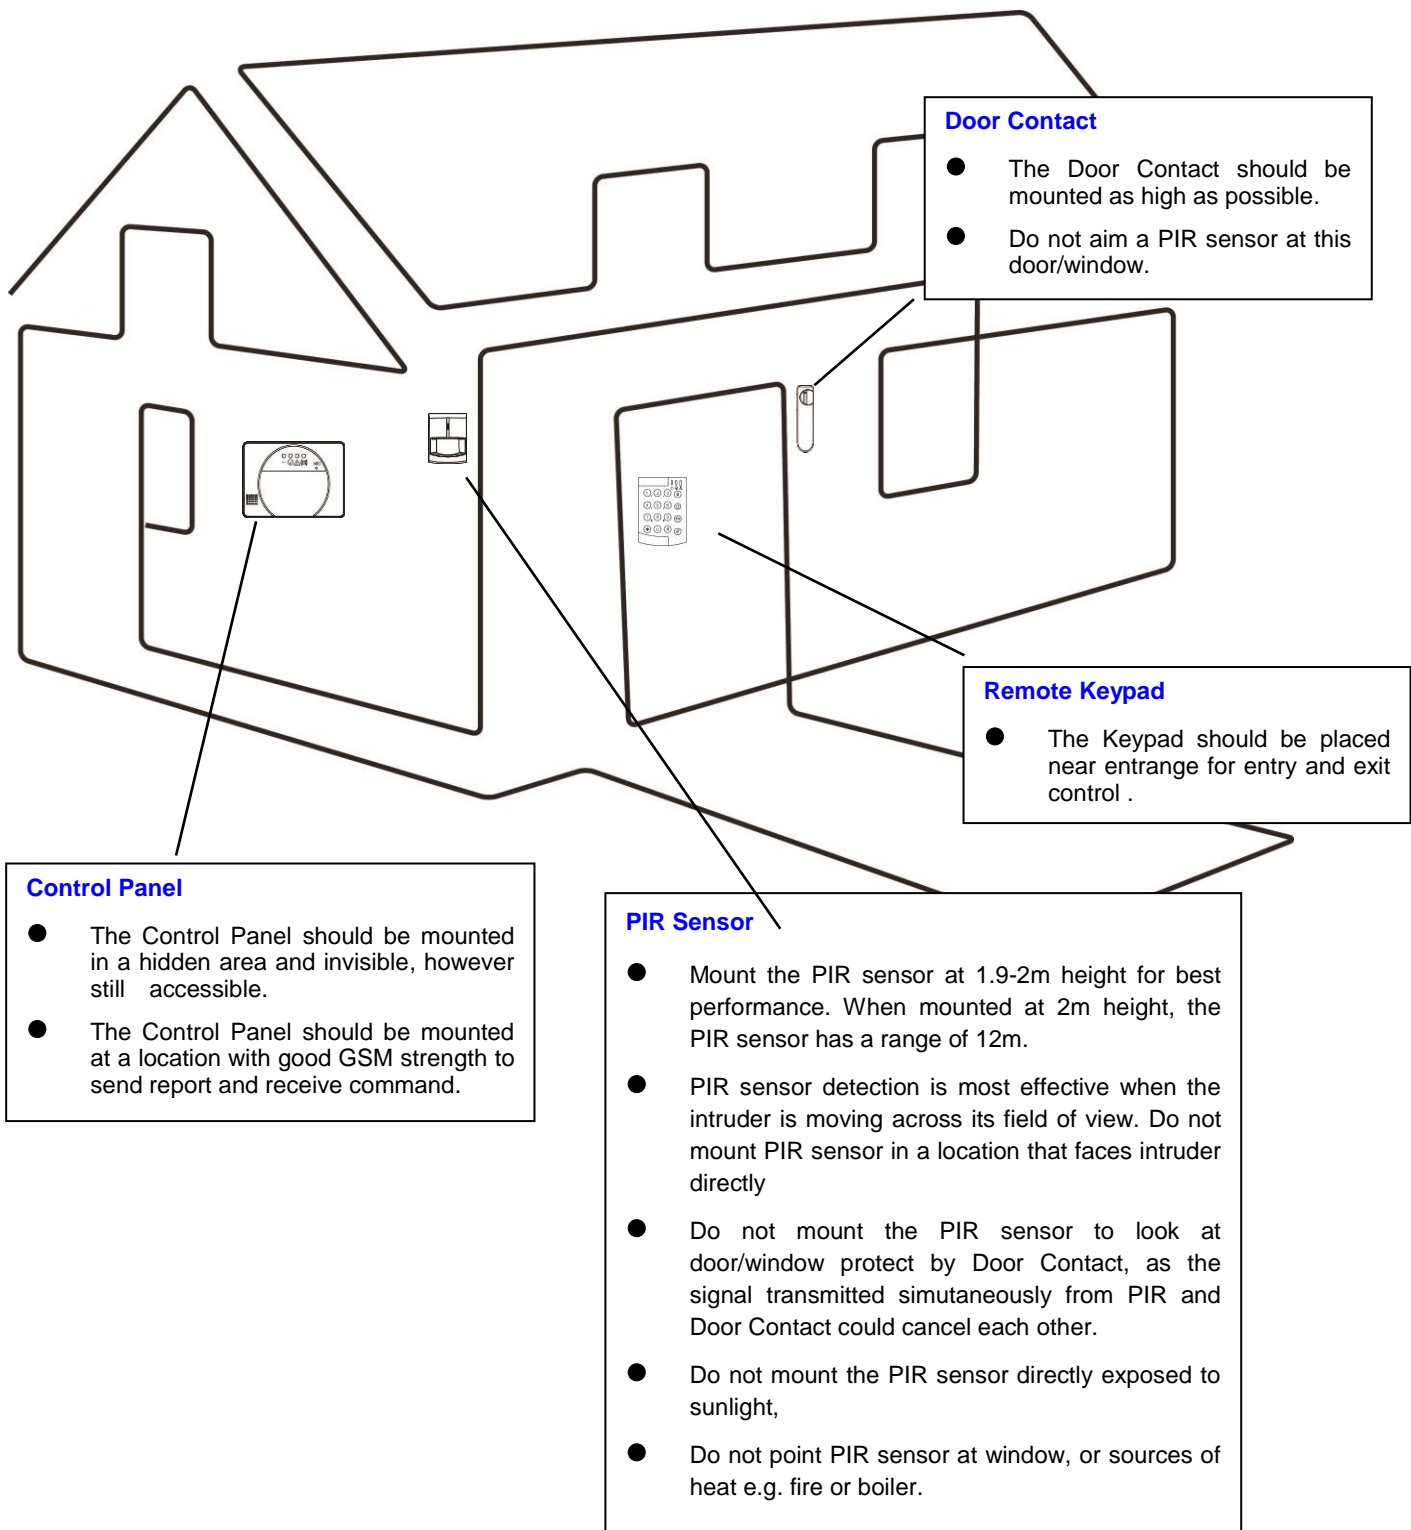


2. Device Introduction

The Alarm System supports multiple devices which are listed in this section. For accessory devices, please refer to individual device manual for detail instruction

NOTE: The basic package you purchase includes the following devices:

1 x PIR Sensor, 1 x Door Contact, 1 Remote Keypad

Other useful devices are available separately, see www.blaupunkt.com.

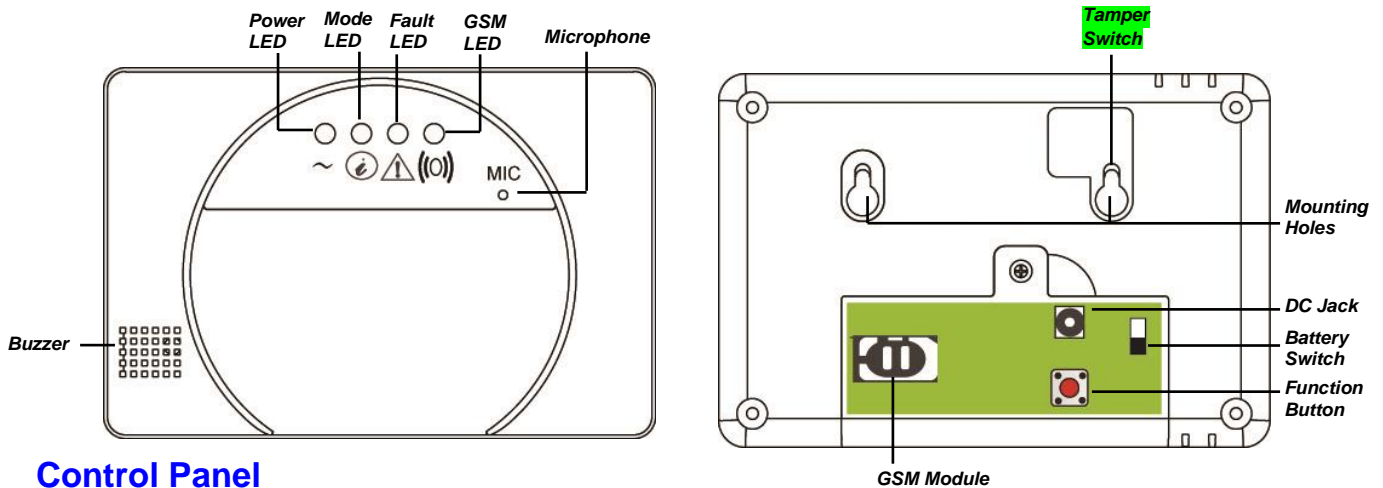

Control Panel

- A 9V 1A adaptor is supplied to power the Control Panel. Please wait until a SIM card is inserted before connecting the adaptor.
- In addition to the adaptor, there is a rechargeable battery inside the Control Panel that serves as back up power in case of power failure. Once you have connected the AC power supply, please turn on the battery switch to charge the battery. It takes about 72 hours to fully charge the battery. When fully charged, the battery can serve as a back-up power source for about 18 hours.


IMPORTANT NOTE:

The Battery Switch is set to **OFF** by factory default. Please make sure the switch is turned **ON** after connecting the AC power to the Control Panel, otherwise the battery will not be charged and the Control Panel will be without back up power when power fails.

- The Control Panel requires a **SIM card** to send reports and receive commands. Before you insert the SIM card into GSM module, please note the following:
 1. The SIM card must be able to make and receive both telephone calls and SMS messages normally. Data only SIM cards are **NOT compatible** with the Control Panel.
 2. Please make sure SIM card **PIN code is disabled**. To check whether SIM Card PIN code is disabled, insert the SIM card into a working mobile phone, go to SIM card PIN code setting in mobile phone setting functions to disable the SIM card PIN code.
 3. If a **prepaid SIM card** is used, please check the SIM card information carefully as each SIM card provider has their own policy: Some SIM cards have a validity period and must be extended before they expires; some SIM cards will expire automatically if they are not used for a certain time period. When using prepaid SIM card, please make sure you fully understand its user policy, and check the SIM card's remaining value regularly with your service provider to make sure the SIM card is functioning normally.


PIR Sensor

- The PIR sensor detects movement and raise alarm when it detects an intruder.
- The PIR sensor is powered by a 3V lithium battery pre-inserted by factory.
- Pull out the plastic battery saver tab on the back of PIR sensor, this will activate the batteries. The LED will flash for 30 seconds to indicated the PIR is warming up
- When the battery voltage runs low, please follow instruction below to change batteries:
 1. Remove the screw at bottom of PIR sensor to open the cover.
 2. Remove the old battery and press the learn button a couple times to discharge.
 3. Insert the new battery and replace the cover.

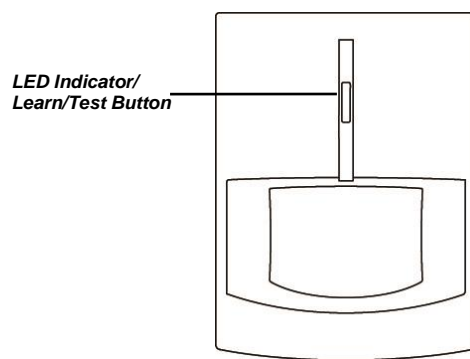


Door Contact:

- The Door Contact detects door/window opening and notifies the Control Panel to raise alarm.
- The Door Contact is powered by a 3V lithium battery pre-inserted by factory.
- Pull out the plastic battery saver tab on the back of Door Contact. This will activate the batteries..
- Press the learn button to transmit learn code.
- When the battery voltage runs low, please follow instruction below to change batteries:
 1. Remove the screw at bottom of Door Contact to open the cover.
 2. Remove the old battery and press the learn button a couple times to discharge.
 3. Insert the new battery and replace the cover.

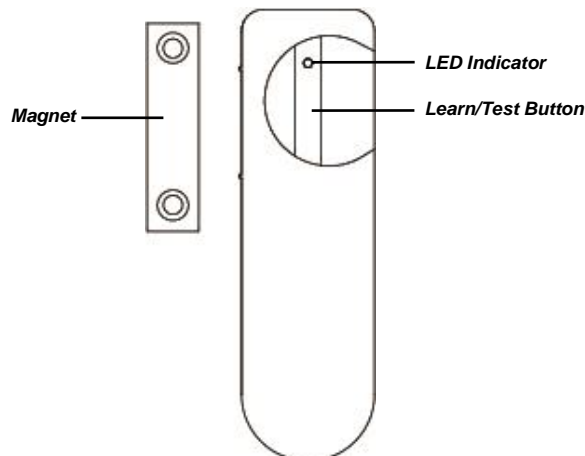

Remote Keypad

- You can arm, home, disarm the alarm system via Remote Keypad using User PIN Code.
- In case of emergency situation, you can also activate an alarms manually with your Remote Keypad
- The Remote Keypad is powered by a CR2450 3V lithium coin cell which is included in the package.
- Pull out the plastic battery saver tab on the back of PIR sensor, this will activate the battery.
- Press both “*” and “#” keys to transmit a learn code.
- When the battery voltage runs low, please follow instruction below to change batteries:
 1. Remove the screw at bottom of Remote Keypad to open the cover.
 2. Remove the old battery.
 3. Insert the new battery and replace the cover.

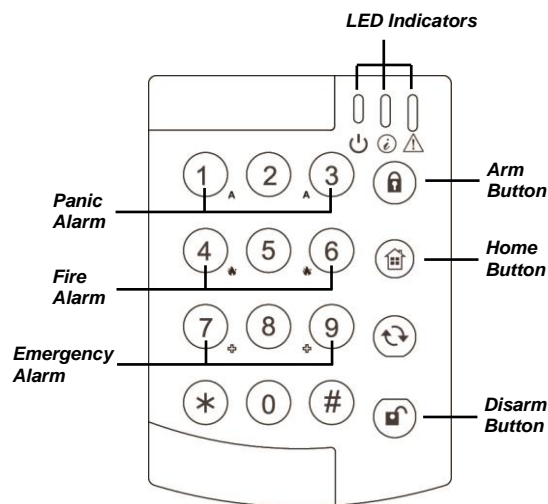

NOTE: For Remote Keypad operation guide, please refer to the Remote Keypad user manual included in the package for detail.


3. Getting Started

This chapter will guide you through the general setup of your alarm system. For System setup, please refer to chapter “Connect2Home Application”.

Inserting your GSM SIM card

Before powering on your Control Panel, you need to insert your GSM SIM card.

NOTE: Before inserting the SIM card, make sure your SIM card password is disabled.

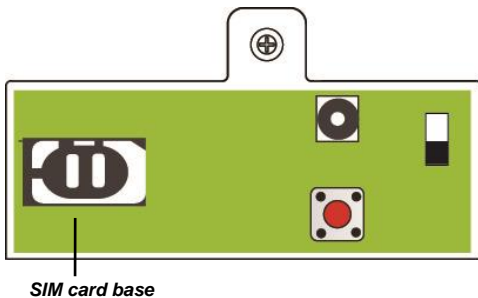

1. Unlock the SIM card base by sliding the cover toward **OPEN** direction.
2. Spring open the SIM card slot and insert your SIM card.
3. Replace the SIM slot onto the base lightly.
4. Remember to lock the SIM card base by sliding the cover toward **LOCK** direction.

Powering On

1. Plug the AC adapter into power socket and connect the other end to the DC Jack.
2. Switch On the Battery Switch to charge the battery and prevent accidental power shortage
3. The LEDs will light up briefly to indicate powering on.

LED Indicators

The LED indicators represent the status of control panel.

1. Power LED

Green LED On: AC Power connected.

Green LED Flash: AC Power failure.

2. Mode LED

Red LED On: The Control Panel is in Away Arm mode

Red LED Flash: The Control Panel is in Home Arm mode

Green LED On: The Control Panel is in Disarm mode

Green LED Flash: The Control Panel is in Learning mode

3. Fault LED

Yellow LED On: There is at least one fault in the Control Panel

Yellow LED Flash: There is at least one fault in the devices

4. GSM LED

On for 5 seconds when power is supplied.

Flash slowly: GSM normal.

Flash quickly: GSM failure

Record Address Message

The Control Panel is capable of reporting events through SMS message or Voice message.

When Voice Reporting is selected and an alarm is triggered, the Control Panel will dial the programmed telephone number and play the alarm message upon answer.

The Address Message is the first voice message played at the beginning of every voice message report to notify the call recipient of the caller's information. The default Address Message is "Alarm System." You can record your own Address Message through the following steps.

1. Under Disarm mode, press and hold the Function Button for 8 seconds and release when the Control Panel emits 1 beep.
2. The Control Panel will emit another long beep after 3 seconds to indicate recording is started.
3. Speak clearly and slowly for the Control Panel to record your address message. When you have finished recording, press the Function Button once to stop recording, or the recording will stop automatically when it reaches 10 seconds.
4. Recording is now complete, the Control Panel will return to the Disarm mode.

Device Learning

The process of adding devices into the control panel is called "Learning." The control panel needs to learn in the accessory devices setup a complete alarm system. Please see below for learning instruction.

NOTE: The devices included in the SA 2650 Kit are already learned into the system. For these devices, please proceed directly to Mounting section below.

1. Under Disarm mode, press the Function Button once, the Control Panel will emit 1 beep and the Mode LED will begin to flash to indicate the Control Panel is now under Learning Mode.
2. Under Learning mode, press the learn/test button on your accessory device to transmit a learn code. (Please refer to the device manual for detail)
3. The Control Panel will emit 1 beep upon receiving the learn code to indicate the device is successfully learnt in.
4. After learning all devices, press the Function button again. The Control Panel will emit 1 beep, and the Mode LED will stop flashing and stay lit to indicate it is now under Disarm mode.
5. When you try to learn in a device that was previously learned into the system, the Control Panel will emit a "Ding Dong" sound.

NOTE: The Learning Mode will time out after 5 minutes. However, whenever the Control Panel receives a learn code, the 5 minutes timer will be reset.

Device Mounting

After learning devices, you should proceed to mount the devices in select locations in your home. As you mount the device, you also need to test the device signal range to make sure the device is within control panel operation range. See below for instruction on device range test and individual device mounting guideline.


1. Put the Control Panel into Learning mode by pressing the Function button once.

2. Find a location where a device is to be mounted, put the device at the location and press learn/test button on the device, refer to each device manual for detail.
3. If the device is within range of the Control Panel, the Control Panel will emit a “Ding Dong” sound to indicate the device is wirelessly connected to the Control Panel. When you are certain the device can function properly at the chosen location, proceed to mount the device.
4. When mounting devices, make sure the device tamper is fully depressed, please refer to device manual for tamper location.

Control Panel

The Control Panel tamper switch is located inside the mounting hole.


1. Use the two holes on the Wall-Mounting Plate, mark the position of the holes on the wall at chest height.
2. Drill two holes into the wall, fix the mounting plate on the wall with screw and plugs provided.
3. Hook the Control Panel onto the plate.
4. Adjust the Control Panel position on the plate to make sure the tamper switch is fully depressed against the mounting plate.

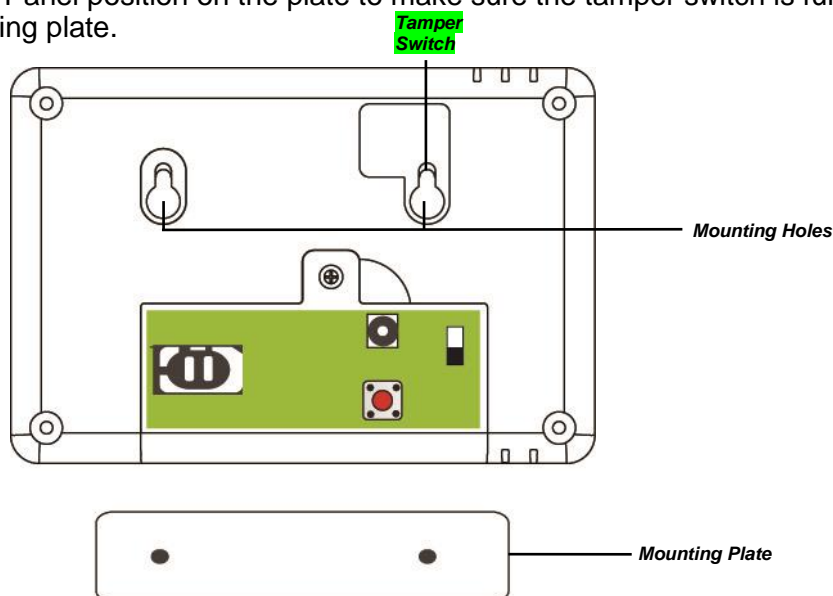

PIR Sensor

The PIR Sensor has knockouts on the back where plastic is thinner. The 2 center knockouts are for flat wall mounting, and the 4 side knockouts are for corner mounting.


1. Break through the knockouts, use the knockouts to mark position on the wall or corner.
2. Drill holes into the wall or corner using the knockouts as template.
3. Fix the PIR Sensor base onto the wall with the screws and plugs provided.
4. Replace the PIR Sensor cover onto the base.

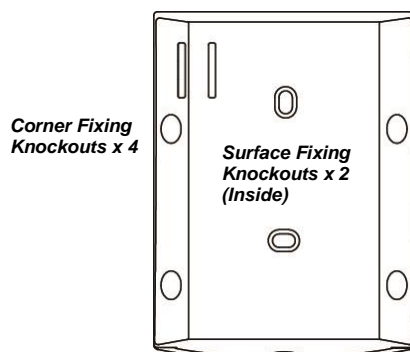

Door Contact

The Door Contact has 2 knockouts on the inside of the back cover where plastic is thinner for wall mounting.


1. The Door Contact should be mounted on the door/window frame, while the magnet should be mounted on the door/window as shown in the picture below. The gap between the Door Contact and the magnet should be no more than 15 mm.
2. Drill holes into the wall using the knockouts as template, then fix the Door Contact base onto the wall with the screws and plugs provided. Alternatively, you can also use the double side adhesive tape provided to glue the Door Contact on the frame.
3. Replace the Door Contact cover onto the base.

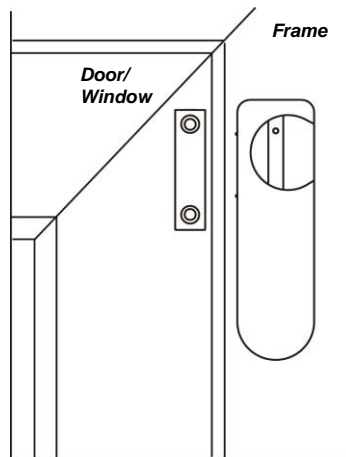

Remote Keypad

The Remote Keypad has 2 mounting holes which are covered from the front by removable cover.

1. Remove the attached cover to reveal the mounting holes.
2. Drill holes into the wall using the holes as template.
3. Fix the Remote Keypad onto the wall with the screws and plugs provided.
4. Replaced the mounting hole covers.

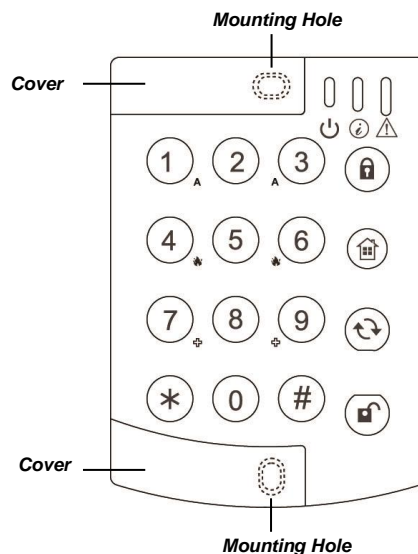

4. System Default Setting

Entry/Exit Time and Device Attribute

When the system is armed and an Entry device is triggered, the Entry timer will begin to count down (default 20 seconds). The system must be disarmed before the timer expires, or a Burglar alarm will be activated.

When the arming process is initiated, the Exit timer will begin to count down (default 30 seconds), the system will ignore any sensors triggered during this period. The user should use this duration to leave the premises before the system is armed.

NOTE: PIR Sensor and Door Contact learn in will be automatically assigned to “Entry” attribute. For device attribute setting and Entry/Exit Time programming, please see later chapter – 5. **Connect2Home Application.**

Alarm Activation

When an alarm is triggered, the system will report to the programmed telephone numbers according to the priority. The system can dial the telephone numbers you entered in the system, play voice message upon connection or send an SMS message.

Address Message

The Address Message will be played in the beginning of all your voice message reports to notify the recipient of your user information. Please make sure you have recorded your own Address Message by referring to the previous chapter 3. **Getting Started.**

Alarm Length

Default alarm length for siren upon activation is set to 3 minutes. To change the alarm length, please refer to chapter 5. **Connect2Home Application.**

Jamming and Interference Detection

The Control Panel is capable of detecting signal jamming and interference, the function is disabled by default, if jamming and interference is of concern to you, please see chapter 5. **Connect2Home Application.**

5. Connect2Home Application

The application is designed to help you to easily control and program your system remotely using a smartphone. Featuring an intuitive and simple interface, it is easy to recognize and operate.

IMPORTANT NOTE:

1. After you send a SMS message to the Control Panel, please make sure you receive a confirmation message from the Control Panel. If you receive an error message or no message at all, it means the command was unsuccessful. Please resend the message or change the setting back to avoid discrepancy between the application and Control Panel.
2. Connect2Home application controls your Control Panel by sending SMS command messages. Please be reminded that each SMS message sent will incur extra cost.

Connect2Home application supports complete system programming and control function. It also features remote Power Switch control and Home Automation rules for easy energy management. To use the application, please go to iPhone App Store or Google Play. Search for **Connect2Home** for the application, download and start the application. The application is only compatible with iPhone or Android phone; it does not support iPad or Android tablet computer.

System Requirement:

iOS 7 or higher for iPhone


Android 2.2 or higher for Android phone.

Connect2Home for iPhone

The iPhone version of Connect2Home Application supports all SMS command functions except SMS commands which inquire Control Panel for information. This is due to the limit of iOS system, which prohibits incoming SMS message from accessing application data..

An iOS version of 7 or higher is required to use Connect2Home Application on iPhone.

Select the Connect2Home icon to start the application.

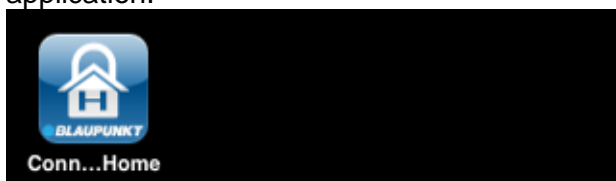

Add New Panel

Upon starting the application, you will first enter Panel Selection menu

- For first time user, you need to first enter your panel information, please select the “+” icon.

- Enter the panel information, including the panel name you want to use in the application, panel SIM card number, a User PIN Code and the SMS keyword used to access the panel. Press “**Done**” to confirm when finished.


- You will return to Panel Selection menu, the new panel you entered will be displayed

NOTE:


- ☞ The PIN Code and SMS Keyword entered in Panel Information are included in every SMS command sent with the app for the Control Panel to verify the SMS command.
- ☞ The default SMS Keyword is **PROG**.
- ☞ The PIN code must be identical to a User PIN Code in the panel. The factory default PIN code in the Control panel is “1234” for User PIN Code 1. You can change both SMS Keyword and PIN code later by editing panel information.

Delete Panel


- To delete existing panel, press “**Remove**”. The screen will show:

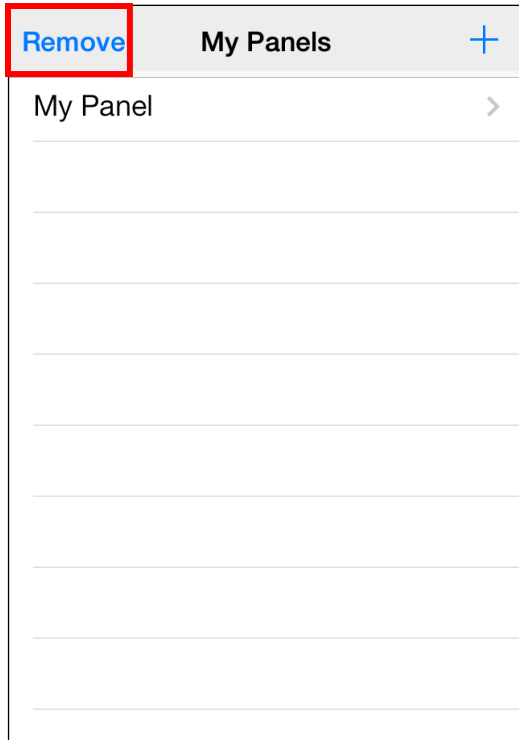

- Then press “**Delete**”, the panel will be removed from the application.

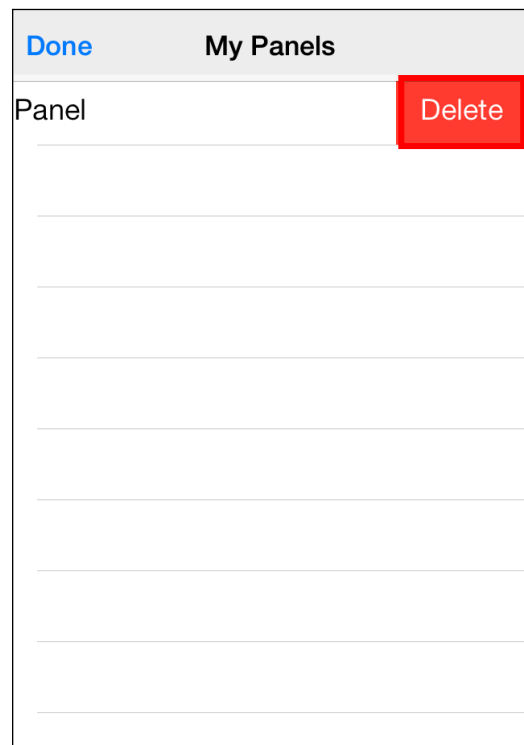


- Press the  button.

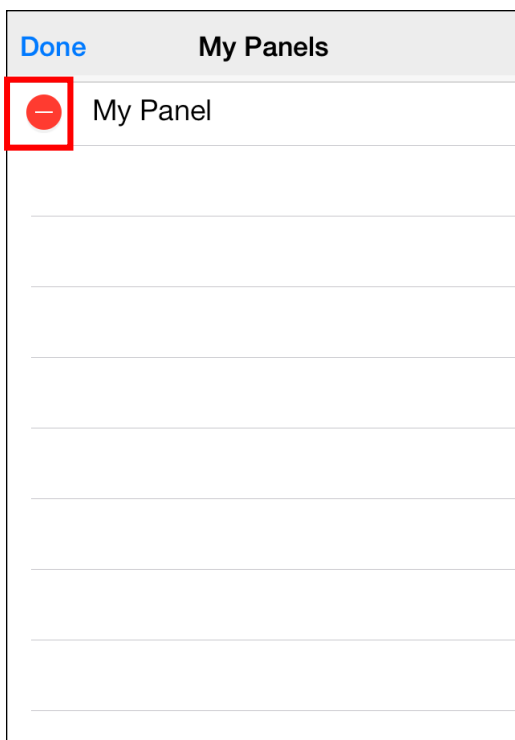


● Panel Main Menu

Press the panel name to enter Panel Main Menu:

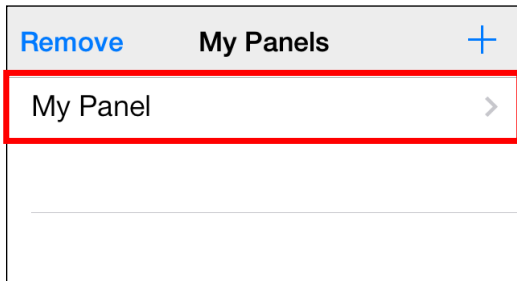


You can select different settings to further program different functions. Pressing "My Panels" button on top left to return to Panel Selection Menu.

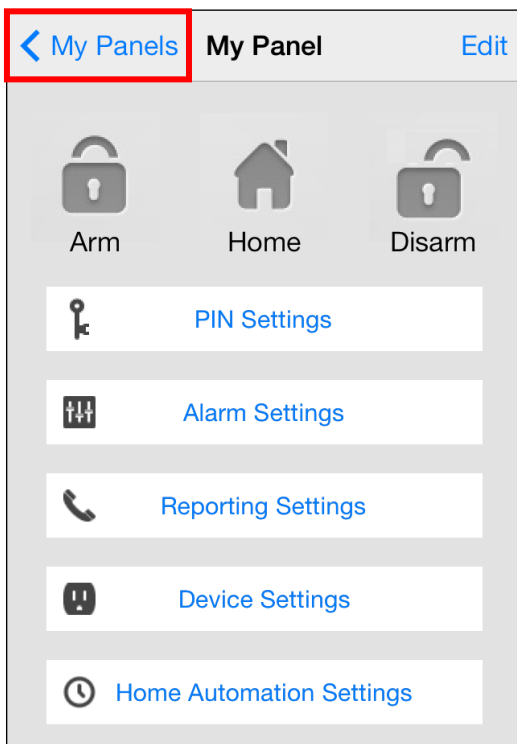


Edit Panel Information

You can edit your control panel information by pressing "Edit."

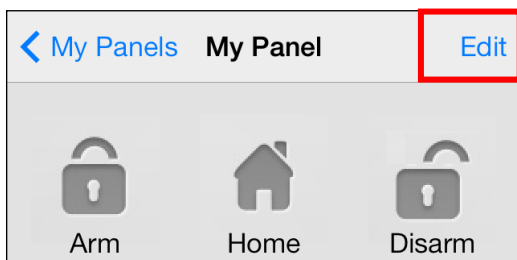


Enter the new panel name, panel SIM card number and PIN Code and the SMS keyword you desired. Press "Done" to confirm when finished.

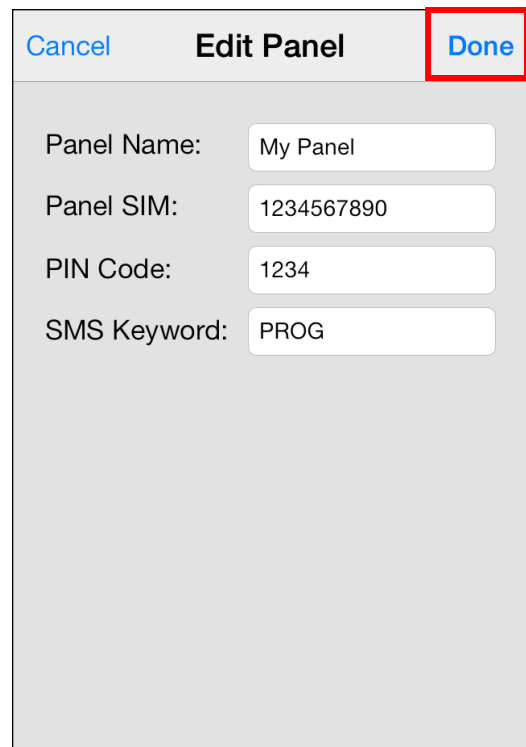

● Away Arm / Home Arm / Disarm

To change system mode, select the icon for Arm / Home / Disarm respectively. A SMS message edit screen will appear for you to confirm. Press "Send" to send the SMS command to panel.

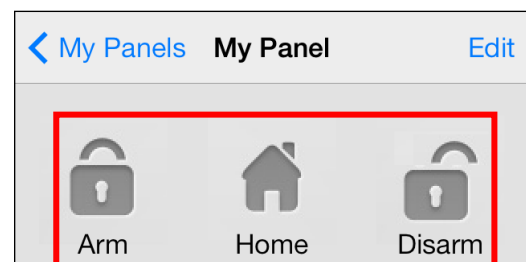

PIN Setting

The PIN Setting Menu allows you to edit User PIN Codes and SMS Keyword.

< My Panel PIN Settings	
PIN User 1	user1,1234 >
PIN User 2	>
PIN User 3	>
PIN User 4	>
SMS Keyword	PROG >

- Select the information you want to edit, enter the information and press **"Save"**. A SMS message edit screen will appear for you to confirm. Press **"Send"** to send the SMS command to panel.

[Back](#) **Edit Pin/User Data** [Save](#)

User Name:

PIN Code:

User PIN Code 1 is also used as SMS PIN Code. Changing User PIN Code 1 will also change the PIN Code used to send SMS command shown in Edit Panel.

<NOTE>

- ☞ User PIN Code 1 is set as **1234** and also used by the app to send SMS command by default.
- ☞ When you change SMS Keyword or User PIN Code 1 and save the setting, the SMS Keyword and PIN Code stored in Panel Information will also be updated accordingly. Please make sure the Control Panel successfully receives the SMS command. If the panel fails to receive the SMS command, you need to edit the Panel Information manually to change SMS Keyword or PIN code back to previous setting. Otherwise you will no longer be able to control the panel with the app.
- ☞ You can delete the User PIN code by keeping the PIN Code field blank and save the setting. User PIN Code 1 cannot be deleted.

Alarm Setting

The Alarm Setting Menu allows you to edit alarm related configuration.

Back	Alarm Settings	Save
	Exit Delay Timer	30 secs >
	Exit Delay Volume	low >
	Entry Delay Timer	20 secs >
	Entry Delay Volume	low >
	Alarm Length	3 mins >
	Door Chime Volume	disable >
	Jamming Function	disable >
	High Temperature Alarm	disable >
	Low Temperature Alarm	disable >

Please refer to below for the configurable settings:

- **Exit time:** Time period given after initiating the arming process. During this time, no sensors will trigger the alarm and you can exit the premises before the system enters arm mode. Default exit time is **30 seconds**.
- **Exit sound:** Exit time countdown beep volume. Default exit sound is **Low**.
- **Entry time:** Time period given after triggering a device set with **Entry** attribute. During this time, the system will need to be disarmed, or the alarm will be activated. Default Entry time is **20 seconds**.
- **Entry sound:** Entry time countdown beep volume. Default entry sound is **Low**.
- **Alarm length:** The time for the alarm to be activated for. Default alarm length is **3 minutes (180 seconds)**.
- **Door Chime Volume:** The Door Chime sound activated by the Control Panel when a device set with entry attribute is triggered under Disarm mode. Default door chime is **Disable**.

- **Jamming function:** Signal interference detection feature. When RF signal jamming interference is detected for a continuous 30 seconds, the alarm will be activated. Factory Default is **Disable**.
 - **High Temperature alarm (Optional Temperature Sensor required):** When enabled, if the temperature exceeds this threshold by 1°C, a SMS alarm report will be sent to programmed telephone number. When the temperature drops to 3 °C below the threshold, a SMS report will be sent to the programmed telephone number to notify the recipient of High Temperature Restoration.
 - **Low Temperature alarm (Optional Temperature Sensor required):** When enabled, the temperature drops below this threshold by 1°C, a SMS alarm report will be sent to programmed telephone number. When the temperature returns to 3 °C above the threshold, a SMS report will be sent to the programmed telephone number to notify the recipient of Low Temperature Restoration.
- Select the option you want to edit, you will enter the edit screen

[< Back](#)

Exit Delay Timer

Current setting: 30 secs

0

10

20

30

40

50

60

- Slide the screen to select the value you want to change, press “**Alarm Setting**” to return to menu when done.
- When you are satisfied with all of your alarm settings, press “**Save**”. A SMS message edit screen will appear for you to confirm. Press “**Send**” to send the SMS command to panel.

Reporting Setting

The Report Setting Menu allows you to edit your telephone numbers for reporting.

The control panel can program up to 6 telephone numbers for status or alarm reporting.

The telephone numbers can either be voice reporting or SMS reporting.

- Voice reporting: The control panel will dial the number assigned to voice reporting to report an alarm.
- SMS reporting: The control panel will send a SMS message to the number assigned to SMS reporting.

SMS reporting are separated into three types: Alarm, Status, All.

- Alarm: if there is an alarm event, the control panel will send the alarm information to the programmed phone number.
- Status: If there is a status change (from Arm to Home Arm, etc.), the control panel will send the status change information to the programmed phone number.
- All: If there is a status change or alarm event, the control panel will send the aforesaid information to the programmed phone number.

< My Panel Reporting Settings	
Reporting 1	>
Reporting 2	>
Reporting 3	>
Reporting 4	>
Reporting 5	>
Reporting 6	>

- Select the reporting priority you wish to edit.
- Enter the telephone number for reporting, and select report type and events.
- Press **“Save”**. A SMS message edit screen will appear for you to confirm. Press **“Send”** to send the SMS command to panel.
- There are no event options for voice reporting, the option to choose “Events” will be dimmed.

Back
Reporting 1
Save

SIM:

Type: SMS

Events: Alarm Status All

Device Setting

The Device Setting Menu allows you to edit device, control Siren (Optional Siren Device required), and learn in or control Power Switch (Optional Power Switch required).

< My Panel
Device Settings

Edit Device >

Siren Control >

PSS Control >

Capture Image >


SA2650 Control Panel does not support “Capture Image” function, please skip this option.

<NOTE>

- ☞ You can delete the telephone number by keeping the telephone number field blank and save the setting.

Edit Device


- The Edit Device option allows you to edit a device name, and attribute for Door Contact, PIR and EIR Sensor.

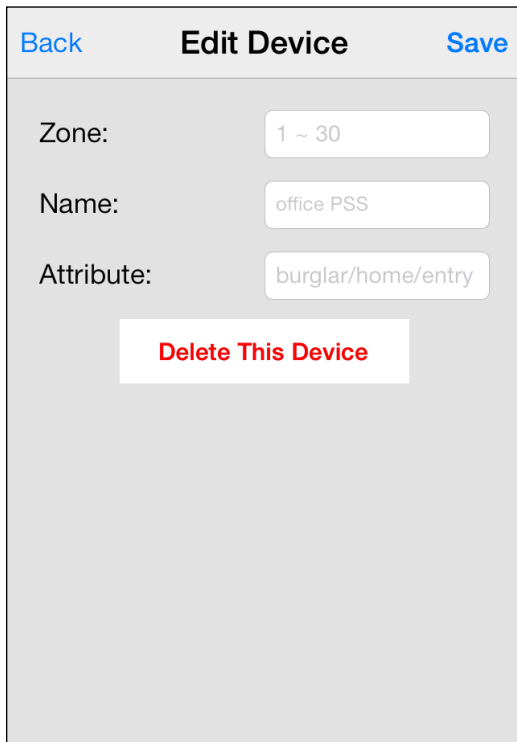

- Select the Zone number of the device you want to edit and enter a new name,
- For Door Contact and PIR Sensor, please select an attribute.
- For other devices without attribute, you can select any attribute as it will not affect the device setting.
- Press “**Save**”. A SMS message edit screen will appear for you to confirm. Press “**Send**” to send the SMS command to panel.
- You can also remove the device specified by pressing “**Delete This Device**”

Siren Control (Optional Siren required)

- The Siren Control option allows you to change Siren settings.

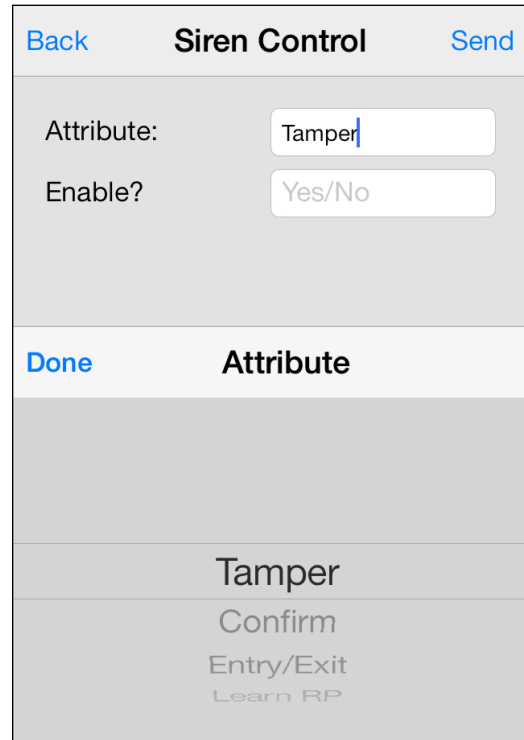

- Select the function you want to edit and choose to enable or disable the function.
- Press “**Save**”. A SMS message edit screen will appear for you to confirm. Press “**Send**” to send the SMS command to panel.

Tamper setting

The siren has built-in tamper protection function to raise alarm when they are being removed from the mounted location or have their covers opened. The tamper protection can be temporarily disabled.

- When set to **Enabled**, the tamper protection is activated
- When set to **Disabled**, the Siren will not trigger alarm when its tamper is violated.

<NOTE>

- ☞ If disabled, the siren tamper will be automatically enabled after one hour

Confirmation Setting

The siren can be enabled or disabled for arming and disarming confirmation.

- When set to **Enabled**, the Siren will beep when the system is armed or disarmed to confirm the mode change.
- When set to **Disabled**, the Siren will not activate when system mode is changed.

Entry/Exit Setting

The Outdoor Siren and Indoor Siren can be enabled or disabled from sounding warning beeps during Entry Time and Exit Time

- When set to **Enabled**, the Siren will beep during Entry and Exit Time.
- When set to **Disabled**, the Siren will not beep during Entry and Exit Time.

Learn Repeater (Optional Repeater required)

Use this function to send add the Repeater device into your alarm system. Put your repeater into learning mode, the send the SMS command to the Control Panel. The panel will transmit signal to Repeater upon receiving the SMS command. Please refer to Repeater manual for further detail.

PSS Control (Optional Power Switch required)

The Power Switches can be controlled manually or through Home Automation settings to turn on/off you home appliance remotely to monitor your home environments.

Back PSS Control Save

PSS channel: 1~4

Action: On

Done

Attribute On

Off Learning

PSS Learning:

1. Put the Power Switch into Learning mode (Please refer to Power Switch manual for detail)
2. Select **Learning** in the Action option on your Connect2Home application, Press **Save** to confirm. Press **Send** to send the SMS command to panel.
3. The control panel will transmit signal to the power switch

The power switch LED will flash 3 times upon receiving signal from Control Panel to indicate learning is now complete.

PSS Control:

- Select the channel you want to edit, then choose to turn on/off the Power Switch.
- Press **Save**. A SMS message edit screen will appear for you to confirm. Press **Send** to send the SMS command to panel.

Home Automation Rules (Optional Power Switch required)

1. With Home Automation rules, you can program the Power Switches to turn on/off for preset duration under different conditions. This function allows you to control your home environment when away.
2. The following conditions are available for settings:

Arm – When the system is Away Armed.

Home – When the system is Home Armed.


Disarm – When the system is Disarmed.

High Temperature – When the temperature is higher than the pre-set threshold.

Low Temperature – When the temperature is lower than the pre-set threshold.


Alarm Event – When the set alarm event is triggered.

When any of the required conditions are met, the Control Panel will execute the set rules accordingly.

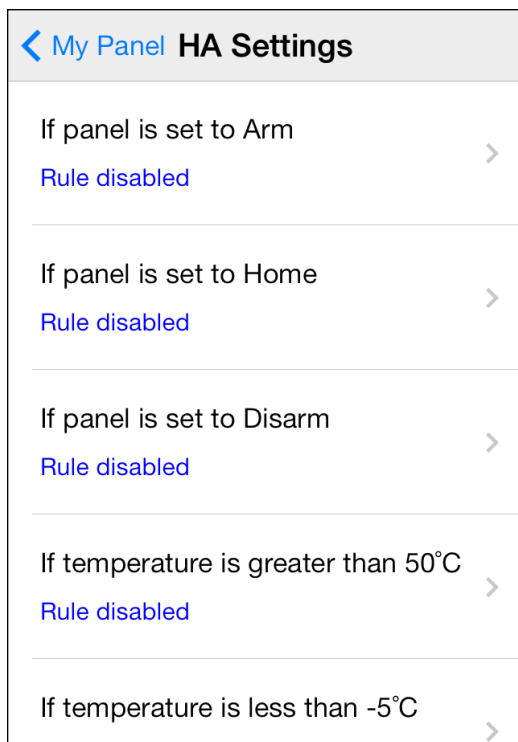

My Panel HA Settings	
If panel is set to Arm	> Rule disabled
If panel is set to Home	> Rule disabled
If panel is set to Disarm	> Rule disabled
If temperature is greater than 50°C	> Rule disabled
If temperature is less than -5°C	>

1. Select the condition in the top column.
2. Select to enable/disable the rule.
3. Select the Power Switch channel to be controlled.
4. Choose to turn on or off the Power Switch.
5. Select the duration of on/off status.
6. For High/Low Temperature condition, set the temperature threshold for the Power Switch to be activated/deactivated.
7. For Time condition, set the time when the Power Switch should be activated/deactivated.
8. For Alarm Event condition, set the events for the Power Switch to be activated/deactivated, you can set more than one events
9. Press **"Save"**. The phone will send a SMS command to panel to program the Home Automation setting.

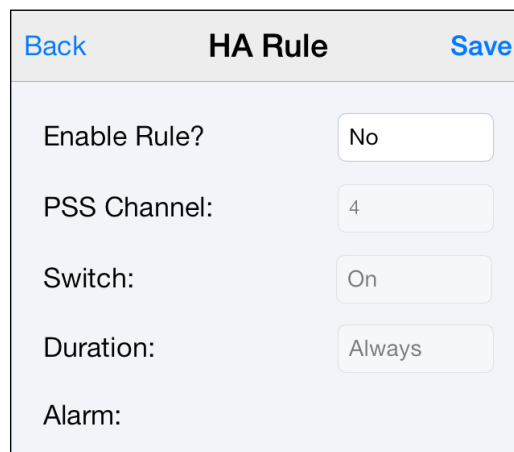

HA Rule	
Enable Rule?	No
PSS Channel:	4
Switch:	On
Duration:	Always
Alarm:	

<NOTE>


- ☞ For system mode change (Arm, Home, Disarm), the Power Switch channel selection is limited to #1 only.
- ☞ For High/Low Temperature and Time setting. You can select any Power Switch channel from #1 ~ #4
- ☞ High/Low temperature setting in Home Automation does not affect High/Low temperature report setting.
- ☞ Time condition is disabled for SA2650. Please ignore this function.

Connect2Home for Android

The Android version of Connect2Home Application supports complete SMS command functions, including the commands to inquire Control Panel setting and update application data with latest setting information.


An Android version of 2.2 or higher is required to use Connect2Home on your Android phone.

Select the Connect2Home icon to start the application.

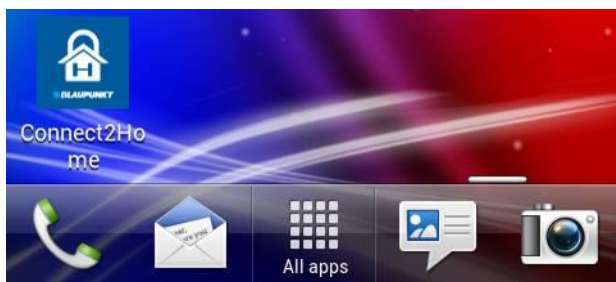

Add New Panel

- For first time user, you need to first enter your panel information, please select the “ADD” button.

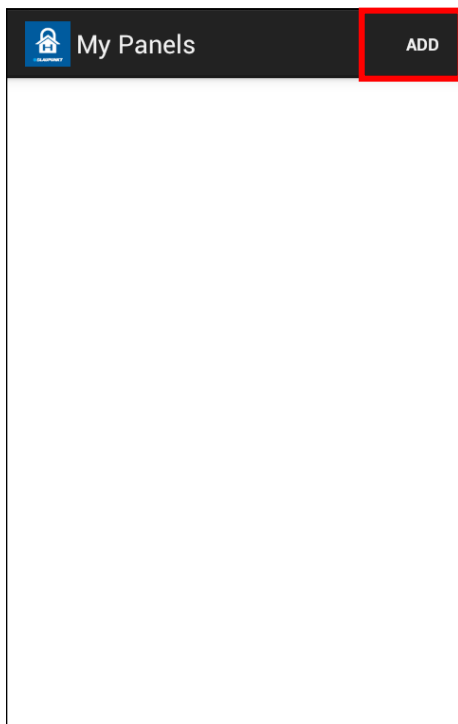

- Enter the panel information, including the panel name you want to use in the application, panel SIM card number, the PIN Code and SMS keyword used to access the panel. Press “Save” to confirm when finished.

The image shows the 'New Panel' form in the Connect2Home app. At the top, there is a black header bar with a white house icon and the text 'New Panel'. To the right of the header bar is a red button with the text 'SAVE'. The form has four input fields: 'Panel Name' with the text 'Office Panel', 'Panel SIM' with the text '+886123456', 'PIN Code' with the text '1234', and 'SMS Keyword' with the text 'PROG'.

- You will return to Panel Selection menu, the new panel you entered will be displayed. Select the panel name to enter panel menu


The image shows the 'My Panels' screen in the Connect2Home app. At the top, there is a black header bar with a white house icon and the text 'My Panels'. To the right of the header bar is a red button with the text 'ADD'. Below the header bar, there is a list of panels. The first panel is 'My Panel', which is highlighted with a red border.

NOTE:

- ☞ The PIN Code and SMS Keyword entered in Panel Information are included in every SMS command sent with the app for the Control Panel to verify the SMS command.
- ☞ The default SMS Keyword is **PROG**.
- ☞ The PIN code must be identical to a User PIN Code in the panel. The factory default PIN code in the Control panel is “1234” for User PIN Code 1. You can change both SMS Keyword and PIN code later by editing panel information.


Panel Main Menu

The Panel Main Menu is displayed as below. You can select different settings to further program different functions. Pressing “Back” button on your Android phone will return to Panel Selection Menu.

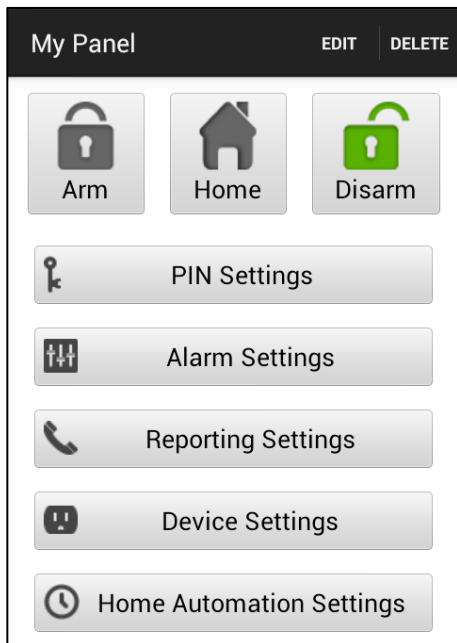


Delete Panel

- To remove current panel, select the “Delete” button at the top right of Panel Main Screen. You will be asked to confirm the action, select “OK to delete the panel.” You will return to Panel Selection Menu.

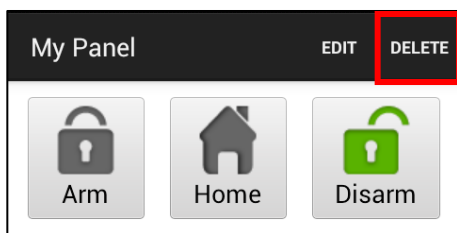

Edit Panel Information

You can edit the Control Panel information by pressing “Edit”

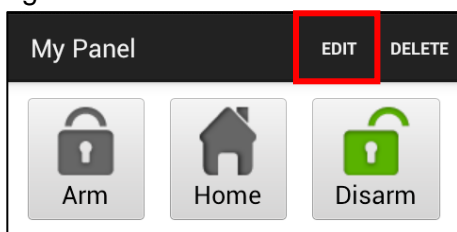

Enter the new panel name, panel SIM card number and PIN Code and the SMS keyword

you desired. Press “Save” to confirm when finished.


Edit Panel		SAVE
Panel Name:	<input type="text" value="My Panel"/>	
Panel SIM:	<input type="text" value="1234567890"/>	
PIN Code:	<input type="text" value="1234"/>	
SMS Keyword:	<input type="text" value="PROG"/>	

Away Arm / Home Arm / Disarm

To change system mode, Press the Arm / Home / Disarm buttons. The phone will send a SMS command to panel to execute the command.

Sync with Panel

Press the Menu button on you Android phone to bring up the “Sync” option. Press “Sync” to send an SMS command to Control Panel requesting it to report back its current mode. Once your phone receives the SMS response message from the Control Panel, Connect2Home app will update the current system mode accordingly for you to view. Please remember to sync your app with all your panel setting when you first create the panel.

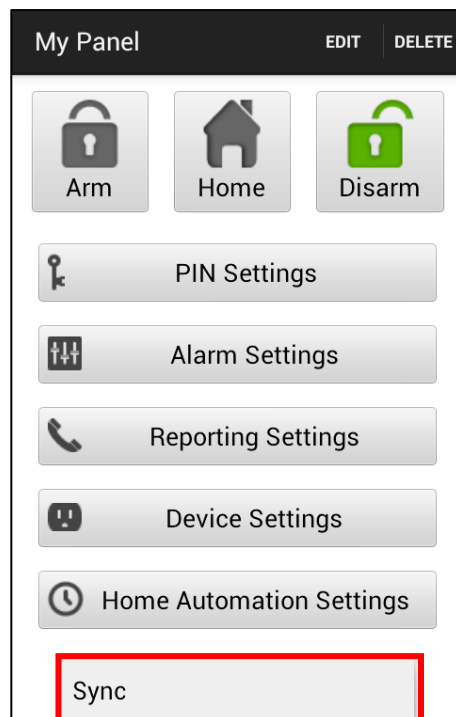

PIN Setting

The PIN Setting Menu allows you to edit User PIN Codes and SMS Keyword.

PIN Settings SAVE

PIN User 1

User Name:

PIN Code:

If this PIN code is the PIN code used to send SMS to the Control Panel, do not change the code. Otherwise the Control Panel will not be able to receive your SMS message. To change the PIN code used to send SMS commands, you need to delete this panel and add a new panel with the new PIN code.

- Select the top column to choose the setting you want to edit

PIN Settings SAVE

PIN User 1

PIN User 2

PIN User 3

PIN User 4

SMS Keyword

If this PIN code is the PIN code used to send SMS to the Control Panel, do not change the code. Otherwise the Control Panel will not be able to receive your SMS message. To change the PIN code used to send SMS commands, you need to delete this panel and add a new panel with the new PIN code.

- Select the information you want to edit, enter the information and press “**Save**”. The phone will send a SMS command to panel.

PIN Settings SAVE

PIN User 1

User Name:

PIN Code:

If this PIN code is the PIN code used to send SMS to the Control Panel, do not change the code. Otherwise the Control Panel will not be able to receive your SMS message. To change the PIN code used to send SMS commands, you need to delete this panel and add a new panel with the new PIN code.

<NOTE>

- ☞ User PIN Code 1 is set as **1234** and also used by the app to send SMS command by default.
- ☞ When you change SMS Keyword or User PIN Code 1 and save the setting. The SMS Keyword and PIN Code stored in Panel Information will also be updated accordingly. Please make sure the Control Panel successfully receives the SMS command. If the panel fails to receive the SMS command, you need to edit the Panel Information manually to change SMS Keyword or PIN code back to previous setting. Otherwise you will no longer be able to control the panel with the app.
- ☞ You can delete the User PIN code by keeping the PIN Code field blank and save the setting. User PIN Code 1 cannot be deleted.

- Press the “Menu” button on your Android phone to bring up the “Sync” function. Press “Sync” to send a SMS command to the Control Panel for inquiring current User PIN code setting. Once your phone receives the SMS response message from the Control Panel, Connect2Home app will update the User PIN code information.

If this PIN code is the PIN code used to send SMS to the Control Panel, do not change the code. Otherwise the Control Panel will not be able to receive your SMS message. To change the PIN code used to send SMS commands, you need to delete this panel and add a new panel with the new PIN code.

Sync

Alarm Setting

The Alarm Setting Menu allows you to edit alarm related configuration.

Alarm Settings	SAVE
Exit Delay Timer	30 secs
Exit Delay Volume	low
Entry Delay Timer	20 secs
Entry Delay Volume	low
Alarm Length	3 mins
Door Chime Volume	disabled
Jamming Function	disabled
High Temperature Alarm	disabled
Low Temperature Alarm	disabled

Please refer to below for the configurable settings.

- **Exit time:** Time period given after initiating the arming process. During this time, no sensors will trigger the alarm and you can exit the premises before the system enters arm mode. Default exit time is **30 seconds**.
- **Exit sound:** Exit time countdown beep volume. Default exit sound is **Low**.
- **Entry time:** Time period given after triggering a device set with **Entry** attribute. During this time, the system will need to be disarmed, or the alarm will be activated. Default Entry time is **20 seconds**.
- **Entry sound:** Entry time countdown beep sound. Default entry sound is **Low**.
- **Alarm length:** The time for the alarm to be activated for. Default alarm length is **3 minutes (180 seconds)**.
- **Door Chime Volume:** The Door Chime sound activated by the Control Panel when a device set with entry attribute is triggered under Disarm mode. Default is **Disabled**.


- **Jamming function:** Signal interference detection feature. When RF signal jamming interference is detected for a continuous 30 seconds, the alarm will be activated. This feature is **Disabled** as a factory default.
- **High Temperature alarm:** When the temperature exceeds this threshold by 1°C, a SMS report will be sent to programmed telephone number. When the temperature drops to 3°C below the threshold, a SMS report will be sent to the programmed telephone number(s) to notify the recipient of High Temperature Restoration.
- **Low Temperature alarm:** When the temperature drops below this threshold by 1°C, a SMS report will be sent to programmed telephone number. When the temperature returns to 3°C above the threshold, a SMS report will be sent to the programmed telephone number(s) to notify the recipient of Low Temperature Restoration.

NOTE:

- ☞ You must first learn in an **optional temperature sensor** to use the temperature report function. You can also choose to enable or disable the reporting function. If reporting is disabled, the system will not send out a report.

Select the option you wish to edit.

- When you are satisfied with all of your alarm settings, press **“Save”**. The phone will send a SMS command to panel.
- You can press the “Menu” button on your Android phone to bring up the “Sync” options and choose to sync either the configurations or high/low temperature setting.

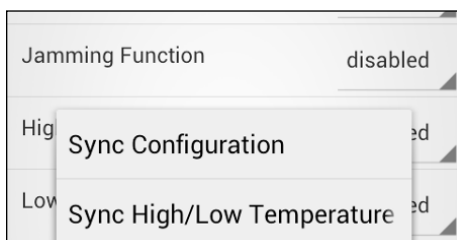


Reporting Setting

The Report Setting Menu allows you to edit your telephone numbers for reporting.

The SA2650 Kit can program up to 6 telephone numbers for status or alarm reporting.

The telephone numbers can either be voice reporting or SMS reporting.

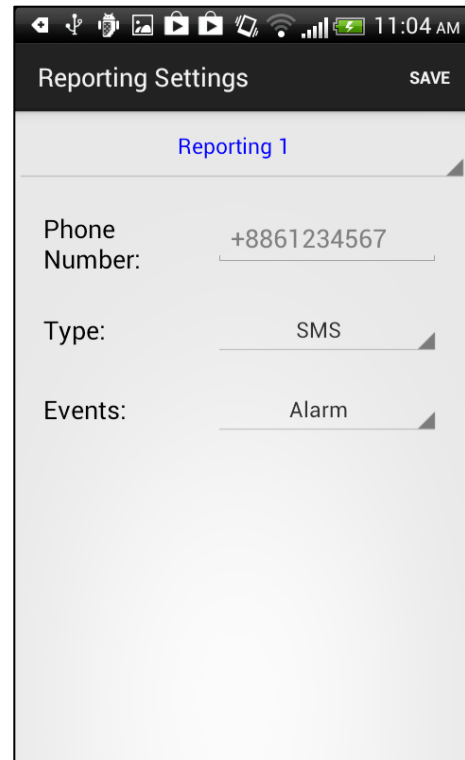

- Voice reporting: The control panel will dial the number assigned to voice reporting to report an alarm.
- SMS reporting: The control panel will send a SMS message to the number assigned to SMS reporting.

SMS reporting are separated into three types: Alarm, Status, All.

- Alarm: if there is an alarm event, the control panel will send the alarm information to the programmed phone number.
- Status: If there is a status change (from Arm to Home Arm, etc.), the control panel will send the status change information to the programmed phone number.
- All: The control panel will send report to the programmed phone number for both alarm and status report.

- Select the top column to select the reporting priority you want to edit.

- Enter the telephone number for reporting, and select report type and events.
- Press **“Save”**. The phone will send a SMS message to panel.

NOTE:

☞ You can delete the telephone number by keeping the telephone number field blank and save the setting.

- You can press the “Menu” button on your Android phone to bring up the “Sync” options and choose to sync either Reporting 1~3 or 4~6.

Device Setting

The Device Setting Menu allows you to edit device, Control Siren (Optional Siren Device required), and learn in or control Power Switch (Optional Power Switch required).

- Select the top column to choose between Edit Device, Siren Control, and PSS Control.

- SA2650 Control Panel does not support “Capture Image” function, please skip this option.

Edit Device

- The Edit Device option allows you to edit a device name, and attribute for Door Contact, PIR and EIR Sensor.

Device Settings SAVE

Edit Device

Zone: 1

Attribute: Burglar

Name: device A

Device Type: Unknown

Delete This Device

- Select the Zone number of the device you want to edit and enter a new name,
- For Door Contact and PIR Sensor, please select an attribute.
- For other devices without attribute, you can select any attribute as it will not affect the device setting.
- Press **“Save”**. The phone will send a SMS command to panel.
- You can also remove the device specified by pressing “Delete This Device”

- You can press the “Menu” button on your Android phone to bring up the “Sync” options and choose to sync device information in different zones.

Zone: 1

Attribute: Burglar

Sync Device Zone 1 ~ 5

Sync Device Zone 6 ~ 10

Sync Device Zone 11 ~ 15

Sync Device Zone 16 ~ 20

Sync Device Zone 21 ~ 25

Sync Device Zone 26 ~ 30

- **“Device Type”** information will only be updated after you successfully synced with the Control Panel

Device Settings SAVE

Edit Device

Zone: 1

Attribute: Burglar


Name: device A

Device Type: Door Contact

Delete This Device

Siren Control (Optional Siren required)

The Siren Control option allows you to change Siren settings.

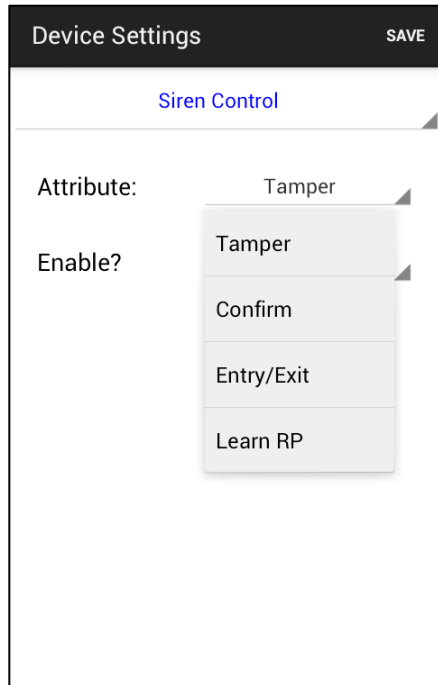

- Select the attribute and choose to enable or disable the function.
- Press **“Save”**. The phone will send a SMS command to panel.

Tamper setting

The siren has tamper protection function to raise alarm when it is removed from the mounted location, or its covers opened. The tamper function can be temporarily disabled.

- When set to **Enabled**, the tamper protection is activated
- When set to **Disabled**, the Siren will not trigger alarm when its tamper is violated.

Confirmation Setting

The Outdoor Siren and can be enabled or disabled for arming and disarming confirmation.

- When set to **Enabled**, the Siren will beep when the system is armed or disarmed to confirm the mode change.
- When set to **Disabled**, the Siren will not beep when system mode is changed.

Entry/Exit Setting

The Outdoor Siren and Indoor Siren can be enabled or disabled from sounding warning beeps during Entry Time and Exit Time


- When set to **Enabled**, the Siren will beep during Entry and Exit Time.
- When set to **Disabled**, the Siren will not beep during Entry and Exit Time.

Learn Repeater (Optional Repeater required)

Use this function to send add the Repeater device into your alarm system. Put your repeater into learning mode, the send the SMS command to the Control Panel. The panel will transmit signal to Repeater upon receiving the SMS command. Please refer to Repeater manual for further detail.

PSS Control (Optional Power Switch required)

The Power Switches can be controlled manually or through Home Automation settings to turn on/off your home appliance remotely to monitor your home environments.

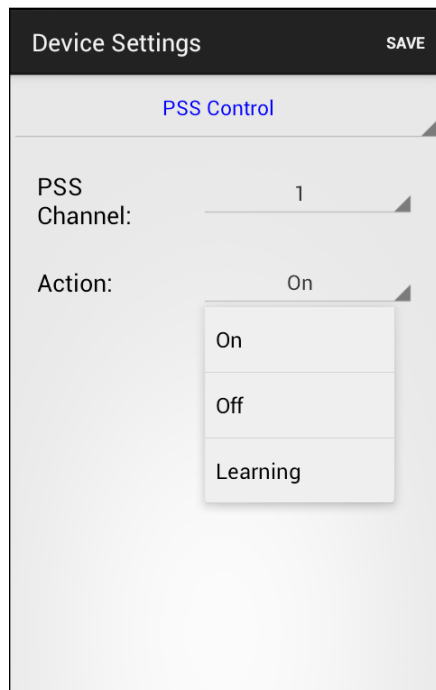

PSS Learning:

- Put the Power Switch into Learning mode (Please refer to Power Switch manual for detail)
- Select **Learning** in the Action option on your Connect2Home application, Press **"Save"** to send the SMS command to panel.
- The control panel will transmit signal to the power switch
- The power switch LED will flash 3 times upon receiving signal from Control panel to indicate learning is now complete.

PSS Control:

- Select the channel you want to edit, then choose to turn on/off the Power Switch.
- Press **"Save"** to send the SMS command to panel.

Home Automation Rules (Optional Power Switch required)

1. With Home Automation rules, you can program the Power Switches to turn on/off for preset duration under different conditions. This function allows you to control your home environment when away.
2. The following conditions are available for settings:

Arm – When the system is Away Armed.

Home – When the system is Home Armed.


Disarm – When the system is Disarmed.

High Temperature – When the temperature is higher than the pre-set threshold.

Low Temperature – When the temperature is lower than the pre-set threshold.

Alarm Event – When the set alarm event is triggered.

When any of the required conditions are met, the Control Panel will execute the set rules accordingly.

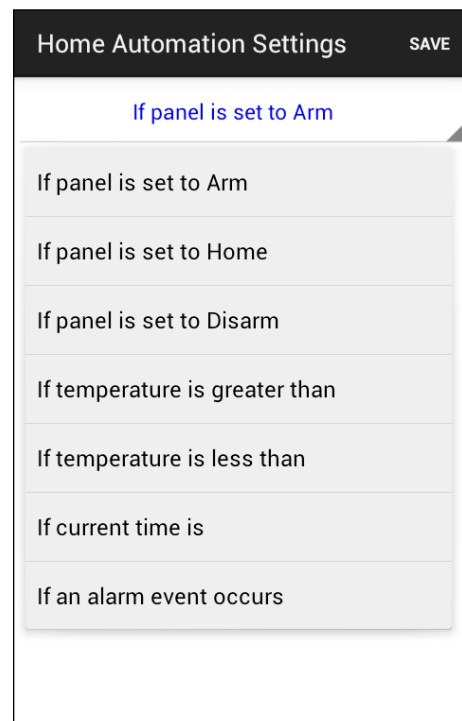

1. Select the condition in the top column.
2. Select to enable/disable the rule.
3. Select the Power Switch channel to be controlled.

4. Choose to turn on or off the Power Switch.
5. Select the duration of on/off status.
6. For High/Low Temperature condition, set the temperature threshold for the Power Switch to be activated/deactivated.
7. For Time condition, set the time when the Power Switch should be activated/deactivated.
8. For Alarm Event condition, set the events for the Power Switch to be activated/deactivated, you can set more than one events
9. Press **"Save"**. The phone will send a SMS command to panel to program the Home Automation setting.

Home Automation Settings SAVE

If panel is set to Arm

Enable Rule? No

PSS Channel: 1

Switch: Off

Duration: Always

NOTE:

- ☞ For system mode change (Arm, Home, Disarm), the Power Switch channel selection is limited to #1 only.
- ☞ For High/Low Temperature and Time setting. You can select any Power Switch channel from #1 ~ #4.
- ☞ Higher/Lower temperature setting in Home Automation Rules does not affect High/Low temperature report setting.
- ☞ Time condition is disabled for SA2650. Please ignore this function.

6. System Information and Operation

This chapter covers system general characteristic under normal operation.

IMPORTANT NOTE:

If you operate your alarm system via Connect2Home application, please be reminded that the SMS command messages sent with Connect2Home application will incur extra cost.

Arming/Disarming the System

To change the modes, you can use the Connect2Home Application or the Remote Keypad.

Away Arm

1. Press the “Arm” button on the Connect2Home application; or
2. Use the Remote Keypad to arm the system.

Home Arm

1. Press the “Home Arm” button on the Connect2Home application; or
2. Use the Remote Keypad to home arm the system.

After initiating the arming process, the control panel will start counting down (see below) while emitting small beeps periodically.

Upon finishing the countdown, the control panel will emit small beeps depending on your arm mode: 3 quick beeps for home arming. 1 long beep for away arming.

Exit Delay Timer

After initiating the arming process, the users are given time to exit the premises before the system is armed.

The exit delay timer is configurable with the Connect2Home application, or through the SMS command.

Stopping the Exit Timer

You can stop the exit timer before it finishes counting down. To do that, you can either

1. Use the Remote Keypad to Disarm the system., or
2. Select disarm on the Connect2Home application, or

Extending the Exit Timer

You can reset the exit timer to its initial duration before it finishes counting down by repeat the arming action with your Remote Keypad.

Fault Events

The Control Panel keeps track of the system condition and will alert the user when a fault is detected. For example: when the door contact is not aligned with the magnet, or when its tamper switch is activated.

When faults exist in system, the Fault LED will light up to indicate. If the fault exists in the panel, the Fault LED will stay lit. If the fault exists in a device, the Fault LED will start flashing.

If you have set a mobile number to SMS report for All Event or Status Events, the Control Panel will also send a SMS message to notify you when fault is detected.

NOTE:

- ☞ Before arming the system, you should first resolve all existing fault events and make sure the Fault LED is turned off. You should avoid arming the system with existing fault event, as it means your system is under potential risk. For example, a tamper open fault could mean the sensor is not properly installed, which could affect its detection capability.
- ☞ If the system is armed with existing fault events, the panel will send a Status SMS report to programmed telephone number to warn user of faulty condition.

Disarm

When the system is under Away arm or Home Arm mode, to disarm the system:

1. Use the Remote Keypad to Disarm the system.
2. For Connect2Home application, simply press the “**Disarm**” button.

Entry Delay Timer

When a Door Contact or PIR sensor, set to **Entry** attribute, is triggered, the system will begin an Entry Delay countdown timer according to Entry Time setting.

The reason for this is to give the users some time to disarm the system when you enter your home. You need to disarm the system before the timer expires, or a burglar alarm will be activated.

Alarm Activation

1. When a device set to Burglar attribute is triggered, the alarm will be activated immediately.
2. When a device set to Entry attribute is triggered, the Entry countdown timer will be activated. If the system is not disarmed before the timer expires, an alarm will be activated.
3. When a device set to Home Omit attribute is triggered in Home Arm mode, the device will be ignored. If the device is triggered in Away arm mode, the alarm will be activated immediately.
4. When the tamper switch of the Control Panel or accessory devices is triggered in Away arm mode, the alarm will be activated immediately.
5. You can trigger emergency alarms by pressing keys on the Remote Keypad.

Stopping the Alarm

During an alarm, the Control Panel will sound the siren, and report to the programmed telephone numbers.

To stop the alarm, send a SMS command to disarm the system with Connect2Home application, or disarm the system with your Remote Keypad.

Alarm Memory

If an alarm was raised without being silenced during your absence, the alarm reporting will still be carried out.

When you come back and disarm the system, the siren will sound for 3-second to warn you that the intruder might still be inside your house.

Tamper Protection

1. When the system is under Away Arm mode, if a tamper switch is triggered, an alarm will be activated immediately. The Control Panel will send a SMS alarm event "Tamper" to programmed SMS report telephone number, or dial the Voice report telephone number and play "Burglar" message upon answer.
2. When the system is under Home or Disarm mode, the alarm will not be activated. The Control Panel will send a SMS status event "Tamper" to programmed SMS report telephone number, it will not dial for Voice report. The fault LED will light up to remind you.

Dialing and Call Acknowledgement

When an alarm is activated, the Control Panel will dial the programmed telephone numbers in priority order for Voice Message or SMS Message report. When the Control Panel makes Voice Message Reports:

- After dialing, the Control Panel will delay 5 seconds before playing the message. It will first play the general part of the recorded message (Address) then plays the specific alarm message (Burglar, Fire, Medical or Emergency) depending on the nature of the alarm.
- To ensure the call is successfully received by the recipient, the recipient should acknowledge the message by pressing the appropriate button on his telephone set.
- If the Control Panel does not receive any acknowledgement, the message will be repeated for 85 seconds. The Control Panel will then consider the call unsuccessful and dial the next phone number in priority.
- If more than one number is programmed the Control Panel will continue to dial the number(s) until a recipient presses the third response key.
- If no phone number is programmed, the Control Panel will not dial.

Call Acknowledgement

When the Control Panel makes Voice Report, there are 3 responses available for the recipient to receive the call, by pressing **1**, **0** or **9** key on his telephone set.

Press **1**:

- ✓ The Control Panel will open a one-way listen only channel for 2 minutes for you to listen to what is happening on the other side.
- ✓ During the last 20 seconds of the 2-minute period, the Control Panel will sound a beep to remind the recipient. Press 1 again to extend another 2 minutes.
- ✓ When the 2-minute period expires, the Control Panel will automatically hang up and dial the next number.

Press **0**:

-
- ✓ The Control Panel will hang up.
 - ✓ The Control Panel will continue Alarming.
 - ✓ The Control Panel will dial the next number.

Press **9**:

- ✓ The Control Panel will hang up.
- ✓ The Control Panel will stop alarming and stop dialing.

The panel will also stop reporting if 2 call recipient press 1 or 0 to acknowledge the report.

If the call recipient hangs up the telephone without any acknowledgement, the Control Panel will redial the telephone to retry the report for a maximum of 5 times.

Auto Redial

- When only one telephone number is stored and the number is engaged, the Control Panel will automatically redial up to 5 times with an interval of 80 sec. between each attempt.
- When more than one telephone numbers are stored, the Control Panel will dial according to priority order. If the number being dialed is engaged, it will try the next number. Each number will be tried up to 5 times and the interval between each attempt is 20 sec.
- The Control Panel will redial the telephone numbers for up to 3 cycles, 15 times maximum.

7. Troubleshooting & Factory Reset

This chapter covers the potential issues you may encounter during system operation.

Control Panel

Control Panel Fault Yellow LED indicates fault in system. If the fault happens in the Control Panel, the LED stays lit. If the fault happens in the devices, the LED flashes. The possible fault events include:

- Control Panel / Devices low battery:
 - Change device batteries or charge Control Panel battery accordingly.
- AC power fail:
 - Check AC power connection
- Sensor out of order:
 - Check device battery status and conduct Walk Test to confirm if the Control Panel can receive device signal.
- Control Panel or Device tamper:
 - Close the panel's or device's tamper switch.
- GSM related failures:

If the GSM LED flashes quickly, that means there is a fault in the GSM functions

 - Check if SIM card is properly installed
 - Check if SIM card's PIN is inactive
 - Check if the signal strength is strong enough
- Interference:
 - Perform Walk Test on all your devices to check if Control Panel can still receive their signals.
 - Use Test Call function to test if Control Panel can report normally to programmed telephone number.

PIR Sensor

- PIR LED flashing when activated:
 - PIR is on low battery or tamper switch triggered.
- PIR is not responding to movement:
 - PIR has a built-in 1 minute sleep timer after detecting a movement. PIR will not redetect movement within 1 minute after it is triggered. Please wait for at least 1 minute before testing PIR again.
 - PIR battery is exhausted, please change a battery.
- PIR is responding slowly:
 - This is normal. PIR has sophisticated false arm filter setting to prevent accidental trigger. It is also less sensitive when walking directly toward it

-
- PIR giving false alarm:
 - Make sure pets have no access to protected area.
 - Make sure the PIR is not pointed at source of heat or moving objects

Door Contact

- Door Contact LED flashing when activated:
 - Door Contact is on low battery or tamper switch triggered.
- Door Contact is not responding to door/window opening
 - Door Contact battery is exhausted, please change battery.
 - The magnet is too far away from the Door Contact; please check the gap between the magnet and the Door Contact. Reduce the gap and test the Door Contact again.

Remote Keypad

- Remote Keypad Orange LED lights up during operation
 - Remote Keypad tamper switch is triggered.
- Remote Keypad Orange LED flashes up during operation
 - Remote Keypad is under low battery.

Connect2Home Application

- The system is not responding to SMS command
 - Make sure the Control Panel GSM signal is normal.
 - Make sure the SMS Keyword and PIN Code in the application is identical to Control Panel setting.
 - Avoid sending multiple commands in a short time. Wait until receiving confirmation message from the Control Panel before sending the next command.

Factory Reset

The Factory Reset function will delete all learned in devices and returns all system setting to default value. After the setting you will need to setup the system again from the beginning via **First Time Setup**.

1. Power down Control Panel and turn off the battery switch
2. Apply power while holding down the **Function** key.
3. All LEDs will flash for 5 times.
4. All programmed parameters are reset to factory default setting.

NOTE: Once the **Factory Reset** is executed, all the programmed data are returned to its default value and all the devices having been learnt-in are removed. You have to do the programming and learn in the device one by one again.

8. Specifications

All Devices

Environmental Condition

-10°C to 40°C, relative humidity 85% non-condensing for Control Panel and all devices.

Radio Operation Range

About 30m in typical domestic installation, range can vary depending on building construction, device location, and environment.

Control Panel

Siren Output

96 dBA sound pressure @ 1m minimum

Zones

30 radio devices (Plus 4 optional Power Switches).

Power Supply

9VDC 1A Power Adaptor

Battery

4.8V 600mAH Ni-MH Rechargeable Battery, charge time 72 hours.

Battery Backup Time

18 hours

PIR Sensor

Radio Frequency

868MHz

Battery

1 x 3V lithium battery

Door Contact

Radio Frequency

868MHz

Battery

1 x 3V 1/2 AA lithium battery

Remote Keypad

Radio Frequency

868MHz

Battery

1 x CR2450 3V lithium coin cell

Compliance Statement

Declaration of Conformity

This device complies with the requirements of the RED 2014/53/EU and the following harmonized standards have been applied:

Health: EN50385:2002

Safety: EN60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EMC: EN 301 489-1 V1.9.2:2011-09,
EN 301 489-3 V1.6.1:2013-08
EN 301 489-7 V1.3.1:2005-11

Radio: 3GPP TS 51.010-1 V9.8.0, EN 301 511 V9.0.2 (GSM 13.11)
3GPP TS 51.010-1 V9.8.0, 3GPP TS 51.010-2 V9.0.1
3GPP TS 51.010-4 V4.14.1, 3GPP TS 51.010-5 V9.0.1
EN 300 220-1 V2.4.1:2012-05
EN 300 220-2 V2.4.1:2012:05

FCC

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

Blaupunkt Competence Center Security & Care

Azure Security & Care Corporation

www.blaupunkt.com

6F., No.1, Lane 250, Sinhu 2nd Rd.,
Neihu, Taipei 114, Taiwan