

CALCOLO CAPACITA' BATTERIA PER "INFINITY"

	carico in W									
	50	100	150	200	250	300	350	400	450	
15'	3	6	9	11	14	16	19	21	23	
30'	6	11	17	22	26	31	35	39	43	
45'	8	15	22	29	35	41	47	52	57	
60'	10	19	28	36	44	52	59	65	72	
90'	13	25	37	48	59	69	79	87	96	
120'	17	32	48	62	76	89	101	112	123	
150'	22	42	62	80	98	115	131	145		
180'	28	52	76	98	120	141				
210'	29	54	79	103	126	148				
240'	30	57	83	108	132					
300'	34	63	92	120	147					
360'	38	71	104	135						
420'	43	81	119							
480'	51	95	139							
540'	55	103	151							
600'	61	114								

INFINITY 800

12Vdc 1 batteria

	carico in W									
	100	200	300	400	500	600	700	800	900	1000
15'	3	6	10	13	16	19	22	26	29	32
30'	6	12	18	24	30	36	42	48	55	61
45'	8	16	24	32	40	48	57	65	73	81
60'	10	20	30	40	51	61	71	81	91	101
90'	13	27	40	54	67	81	94	108	121	135
120'	17	35	52	69	87	104	121	139	156	173
150'	22	45	67	90	112	135	157	180	202	
180'	28	55	83	110	138	165	193			
210'	29	58	87	115	144	173	202			
240'	30	61	91	121	152	182				
300'	34	67	101	135	168	202				
360'	38	76	114	152	189					
420'	43	87	130	173						
480'	51	101	152	202						
540'	55	110	165							
600'	61	121	182							

INFINITY 1500

24Vdc 2 batterie